



MULTIFUNCTION METERING PUMP
STEPPER MOTOR DRIVEN



TABLE OF CONTENTS

| | | | |
|---|----|--|----|
| GENERAL SAFETY GUIDELINES..... | 3 | 10. ELECTRICAL WIRING | 35 |
| PURPOSE OF USE AND SAFETY..... | 4 | 10.1 Preliminary checks..... | 35 |
| ENVIRONMENTAL SAFETY..... | 5 | 10.2 connection diagrams | 35 |
| LABEL..... | 5 | 11. MAINTENANCE..... | 36 |
| SPARE PARTS | 5 | 11.1 Maintenance schedule..... | 36 |
| 1. DESCRIPTION..... | 7 | 11.2 Maintenance inspection | 36 |
| 1.1 PRISMA Series..... | 7 | 11.3 Shutdown procedure | 37 |
| 1.2 Working modes | 7 | 11.4 Display battery replacement procedure | 37 |
| 1.3 Functions | 8 | 12. TROUBLESHOOTING | 38 |
| 1.4 Capacities..... | 8 | 12.1 Repair service..... | 38 |
| 1.5 Features..... | 9 | 13. COMPATIBILITY TABLE | 41 |
| 1.6 Unpacking..... | 10 | 13.1 Chemical compatibility table..... | 41 |
| 1.7 List of materials..... | 10 | | |
| 2. PRODUCT DESCRIPTION..... | 11 | | |
| 2.1 Control elements..... | 11 | | |
| 2.1 Pump head | 12 | | |
| 2.3 Dimensions | 13 | | |
| 3. INSTALLATION..... | 15 | | |
| 3.1 How to install metering pump..... | 15 | | |
| 3.2 User health and safety..... | 15 | | |
| 3.3 The work area | 15 | | |
| 3.4 Pump location..... | 15 | | |
| 2.5 Requirements for product positioning | 15 | | |
| 3.6 Installation drawings..... | 16 | | |
| 4. PIPING CONNECTIONS..... | 17 | | |
| 4.1 Foot filter / Level probe | 17 | | |
| 4.2 Suction hose connection..... | 18 | | |
| 4.3 Pump head / delivery hose assembling procedure..... | 18 | | |
| 4.4 Injection valve..... | 19 | | |
| 4.5 Venting hose..... | 19 | | |
| 5. ELECTRICAL WIRINGS..... | 20 | | |
| 5.1 Preliminary checks..... | 20 | | |
| 6. CONNECTIONS..... | 21 | | |
| 7. START UP | 22 | | |
| 7.1 Start up..... | 22 | | |
| 8. PRIMING..... | 23 | | |
| 8.1 Precautions | 23 | | |
| 8.2 Priming | 23 | | |
| 9. SET UP | 24 | | |
| 9.1 Basic principle..... | 24 | | |
| 9.2 Display icon..... | 24 | | |
| 9.3 Menu overview | 25 | | |
| 9.4 Pump capacity setting | 33 | | |



This operating instructions contains safety information that if ignored can endanger life or result in serious injury.

Read these instructions **carefully** before use and keep them for future reference.

Information and specifications on this manual could be incorrect or could have printing errors.

Specifications are subject to change without notice.



**NORME CE
EC RULES (STANDARD EC)
NORMAS DE LA CE**

Direttiva Bassa Tensione
Low Voltage Directive
Directiva de baja tensión } **2014/35/UE**

Direttiva EMC Compatibilità Elettromagnetica
EMC electromagnetic compatibility directive
EMC directiva de compatibilidad electromagnética } **2014/30/UE**

Norme armonizzate europee nell'ambito della direttiva
European harmonized standards underdirective
Las normas europeas armonizadas conforme a la directiva } **2006/42/CE**

GENERAL SAFETY GUIDELINES

Operating, installing, or maintaining the unit in any way that is not covered in this manual could cause death, serious personal injury, or damage to the equipment.

ICONS

This manual use the following safety message icon:



Warning!

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



Warning!

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



Important - A practice not related to personal injury or additional information.



Cross reference - An instance which refers to related information elsewhere in the same document.



AC - Alternating current



Protective earth



DC - Direct current



Stand-by














METERING PUMP IS INTENDED FOR CHEMICAL DOSING AND DRINKING WATER TREATMENT.

Do not use in explosive area (EX).
Do not use with flammable chemicals.
Do not use with radioactive chemicals.

Use after a proper installation.

Use the pump in accordance with the data and specifications printed on the label.

Do not modify or use in a manner inconsistent with the provisions of the operating manual.

-  **Keep the pump protected from sun and water. Avoid water splashes.**
-  **In emergencies the pump should be switched off immediately. Disconnect the power cable from the power supply.**
-  **When using pump with aggressive chemicals observe the regulations concerning the transport and storage of aggressive fluids.**
-  **When installing always observe national regulations.**
-  **Manufacturer is not liable for any unauthorized use or misuse of this product that may cause injury, damage to persons or materials.**
-  **Pump must be accessible at all times for both operating and servicing. Access must not be obstructed in any way.**
-  **Never operate any pumping system with a blocked suction and discharge. You must take all necessary measures to avoid this condition.**
-  **Feeder should be interlocked with a no-flow protection device to automatically shut-off the pumps when there is no flow!**
-  **Adequate measures shall be taken to prevent cross connection of chemicals!**
-  **Chemical feeding must be stopped during backwash cycles and periods of noflow as these conditions may introduce the potential for chemical overdosing. Not doing so may result in elevated chemical concentrations and hazardous gas introduction into the pool or spa.**
-  **Pump and accessories must be serviced and repaired by qualified and authorized personnel only.**
-  **Before any operation:**
 - always read chemical Material Safety Data Sheet (MSDS);
 - always wear protective clothing;
 - always discharge the liquid end before servicing the pump.
 - empty and rinse the liquid end before work on a pump which has been used with hazardous or unknown chemicals.
-  **This equipment requires regular maintenance to ensure potability requirements of the water and maintenance of improvements as declared by the manufacturer.**

**ENVIRONMENTAL
SAFETY**

Work area

Always keep the pump area clean to avoid and/or discover emissions.

Recycling guidelines

EWC code: 16 02 14

Always recycle according to these guidelines:

1. If the unit or parts are accepted by an authorized recycling company, then follow local recycling laws and regulations.
2. If the unit or parts are not accepted by an authorized recycling company, then return them to the nearest representative.


Waste and emissions regulations

Observe these safety regulations regarding waste and emissions:

- Dispose appropriately of all waste.
- Handle and dispose of the dosed chemical in compliance with applicable environmental regulations.
- Clean up all spills in accordance with safety and environmental procedures.
- Report all environmental emissions to the appropriate authorities.

LABEL

Fig. 1. Product label.

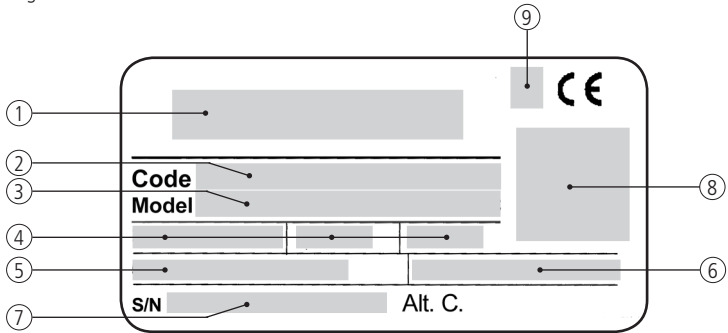

| No. | DESCRIPTION |
|-----|--|
| 1 | Distributor |
| 2 | Code |
| 3 | Model |
| 4 | Voltage supply/frequency - Ampere - protection class |
| 5 | Maximum pressure |
| 6 | Maximum capacity |
| 7 | Serial number |
| 8 | Data matrix |
| 9 | UL conformity (if any) |

Spare parts

For spare parts orders or any other communication, refer to product label. Code (CODE) and serial number (S / N) uniquely identify the pump.

i A not suitable transportation or storage can cause damages.

Use original box to pack the pump.

Observe storage conditions also for transportation.

Although packed, always protect the unit against humidity and the action of chemicals.

A Before return the dosing pump to the manufacturer Repair service, drain the chemical from pump head and rinse it. Refer to  Shutdown procedure.

Fill the PRODUCT SERVICE REPAIR FORM and send it with the dosing pump.
Repair service is not accepted if PRODUCT SERVICE REPAIR FORM is missing.

i DO NOT TRASH PACKAGING. USE IT TO RETURN THE PUMP.

Transportation and storage temperature 10 / 50°C (32 / 122°F)
Umidity..... 95% relative humidity (not condensed)

1. DESCRIPTION

1.1 PRISMA Series

PRISMA stepper motor-driven diaphragm dosing pump, mechanical actuated, provides functionalities. Microprocessor-controlled stepper motor ensures a completely homogeneous dosing process.

The position and the speed of the diaphragm is controlled by the microprocessor electronics during the entire discharge/suction cycle.

The slow mode enables reduction of the suction speed. Thereby, viscous liquids can be dosed more easily and more accurate dosing. When slow motion mode is activated, the maximum delivery rate of the dosing pump is reduced.

Depending on the application, in the dosing range you can use various materials and connections to the pressure and suction side.

Accessory sets are available to ensure the best outcomes and quick installation.

- Spring return mechanism
- Manual degassing valve (PVDF and PP pump heads)
- Flow regulation
- Double ball check valve
- STAND-BY input
- LEVEL (level control) input
- ALARM contact output.
- MODBUS option if requested

i Some functions described into this manual may need accessories not included into the pump packaging.

MULTIFUNCTION STEPPER MOTOR-DRIVEN DOSING PUMP

TURNDOWN RATIO 1:4800*

SLOW SUCTION MODES (x4) for viscous media

COLOR STATUS DISPLAY

ALARM INDICATION ON DISPLAY

LIQUID ENDS AVAILABLE IN DIFFERENT SIZES AND MATERIALS

DOUBLE BALL CHECK VALVE

CAPACITY RANGE 5 – 80 l/h, UP TO 20 bar

* PRISMA STEPPER MOTOR-DRIVEN PUMPS GIVE YOU THE MOST ACCURATE CONTROL OVER THE STROKE SPEED, PROVIDING AN OUTSTANDING TURNDOWN RATIO OF UP TO 4800:1. IT MEANS PRISMA CAN SPLIT UP THE DOSING PROCESS INTO A MAXIMUM OF 4800 STEPS IN ORDER TO OFFER THE MOST HOMOGENEOUS AND PRECISE DISTRIBUTION OF THE PRODUCT TO DOSE ACCORDING TO THE REQUIRED APPLICATION.

1.2 Working modes



Pump can work in different ways:

| MODE | WORKING MODES |
|--------------------|---|
| CONSTANT | Pump doses at a constant rate set in "SPH" (strokes for hour), "SPM" (strokes for minute) or "LPH" (litres per hour) parameters set during program session. |
| CC PER PULSE | The pump doses the quantity of product set for each impulse received. |
| PPM | Dosing rate is determined by pulses from a water meter on the base of set PPM, chemical product concentration (%) and quantity for each single stroke set during program session. |
| PERCENTAGE | Dosing rate is determined by pulses from a water meter on the base of set PERC (%), chemical product concentration (%) and quantity for each single stroke set during program session. |
| MLQ | Dosing rate is determined by pulses from a water meter on the base of set MLQ (milliliters per quintal), chemical product concentration (%) and quantity for each single stroke set during program session. |
| BATCH | Signal from an external contact starts the pump to dose the set quantity. |
| VOLT | Voltage from an external device drives the pump that doses proportionally using a minimum and maximum of strokes for minute set during program session (0–10 VDC). |
| mA | Current from an external device drives the pump that doses proportionally using a minimum and maximum of strokes for minute set during program session. |
| PULSE | Pump doses proportionally between the low and high p/m values. This mode is used with controllers provided of an impulsive output. |
| PAUSE-WORK | Pump doses the set quantity during working time. |
| WEEKLY PROGRAMMING | This mode is used for weekly program pump dosing activity. |

Regardless of the above selected working mode, EXT CONSTANT start/stop the pump by means of the "external constant" contact (INPUT plug).

| | |
|--------------|--|
| EXT CONSTANT | This operating mode is enabled in STAND-BY menu (EXTERNAL INPUT). An external signal starts constant dosing of a certain amount per hour (QUANTITY) at the speed shown. In this case, the working mode displayed is EXT CONSTANT. Contact can be set N.O. or N.C |
|--------------|--|

1.3 Functions

| FUNCTION | ICON | DESCRIPTION |
|------------------------|--|---|
| SLOWMODE |  100% ...% ...% 1% | Slow motion mode enables reduction of the suction speed. Thereby, viscous liquids can be dosed more easily and more accurate dosing. When slow motion mode is reduced (from 100% to 1%, 1 unit step), the maximum delivery rate of the dosing pump is reduced. To enable Slow Mode: ADVANCED / MORE / Pump capacity / Slow mode |
| COLOR STATUS DISPLAY | green display | pump is running |
| | white display | stand-by mode |
| | yellow display | warning condition |
| | red display | alarm condition |
| TURNDOWN RATIO | / | Based on the 4800 motor-step for each dosage provides homogeneous and precise liters per hour distribution of the chemical. Ratio changes according to pump's capacity l/h. Minimum value for cc/pulse mode is 0,0001 ml/r signal |
| DELIVERY SPEED CONTROL |  | Delivery speed control based on pump capacity set. |

1.4 Capacities

| MODELS | | 20005 | 10013 | 05030 | 02080 |
|--------------------------|------|-----------|-----------|-------------|-------------|
| Max capacity | l/h | 5 | 13 | 30 | 80 |
| | GPH | 1.32 | 3.43 | 7.92 | 21.13 |
| Max pressure | bar | 20 | 10 | 5 | 2 |
| | PSI | 290 | 145 | 72.5 | 29 |
| Pump head model | | L | M | N | N |
| Hoses (suction/delivery) | mm | 4x6 / 4x6 | 6x8 / 6x8 | 8x10 / 8x10 | 8x10 / 8x10 |
| | inch | 3/8" | 3/8" | 1/2" | 1/2" |

1.5 Features

| ELECTRICAL | |
|-------------------|---|
| Power supply | 90-260 Vac - 50/60 Hz / 24VDC* *see pump's label |
| Power consumption | 30 W |
| Alarm output | free contact |
| TURN DOWN RATIO | 1:4800 |

| MATERIALS | |
|-----------------------|---|
| Diaphragm | PTFE |
| Case | PP+GF |
| Pump head (available) | PVDF Stainless Steel (AISI 316L) PMMA |

| MECHANICAL | |
|-------------------------|----------------------------------|
| Spring return mechanism | |
| Degassing valve | Manual on PVDF and PP pump heads |
| Double ball check valve | |
| Flow regulation | |

| | |
|-------------------------|--|
| Environment temperature | 10-45 °C / 55-113 °F |
| Chemical temperature | 0-50 °C/ 32-122 °F |
| Installation class | II |
| Protection degree | IP 65 (% working RU: 85% T<=40°C; 70% T=50°C - without condensing water) |
| Max suction height | 1,5 m |
| Dosing accuracy | ± 1% at the rated pressure |

1.6 Unpacking

| QUANTITY | STANDARD PACK | PRISMA (PVDF) | PRISMA (PP/PVC) | PRISMA (SS) |
|----------|---|---------------|-----------------|---------------------------|
| n. 4 | ø6 dibbles | ● | ● | ● |
| n. 4 | 4,5 x 40 self tapping screws | ● | ● | ● |
| n. 1 | 5 X 20 delayed fuse | ● | ● | ● |
| n. 1 | level probe with axial foot filter (PVDF) | ● | ● | |
| n. 1 | 0,3 bar injection valve (PVDF) | ● 1/2" | ● 1/2" | ● 3/4" STAINLESS STEEL |
| m 2 | delivery hose ¹ | ● PVDF | ● PVDF | ● PE |
| m 2 | suction hose ¹ | ● PVC | ● PE | ● PVC |
| m 2 | venting hose | ● PVC | ● PE | |
| m 0,3 | hose / syringe | | | ● PVC |
| m 2,5 | external signal cable | ● | ● | ● |
| m 2 | stand-by/alarm cable | ● | ● | ● |
| n.1 | operating manual | ● | ● | ● |

¹ If hose is 6x8 there is only a 4meters long hose. Cut to obtain suction and delivery hoses.

1.7 List of materials

✓ : standard
X: option available


| | PVDF | PP | PPVO | PMMA | PVC | PE | CE | GLASS | PTFE | SS | FKM B | EPDM | WAX | SI |
|-----------------------------|------|----|------|------|-----|----|----|-------|------|----|-------|------|-----|----|
| PUMP HEAD | ✓ | X | | | X | | | | | X | | | | |
| DIAPHRAGM | | | | | | | | | ✓ | | | | | |
| BALLS | | | | | | ✓ | X | X | X | | | | | |
| SUCTION HOSE | X | | | | ✓ | | | | | | | | | |
| DELIVERY HOSE | ✓ | | | | X | | | | | | | | | |
| VENTING HOSE | X | | | | ✓ | | | | | | | | | |
| O RING | | | | | | | | | X | | ✓ | X | X | X |
| LEVEL PROBE/ FOOT FILTER | ✓ | | | | | | | | | | | | | |
| LEVEL PROBE CABLE | | | | | | ✓ | | | | | | | | |



DO NOT TRASH PACKAGING.
IT CAN BE USED TO RETURN THE PUMP.

2. PUMP'S DESCRIPTION


2.1 Control elements

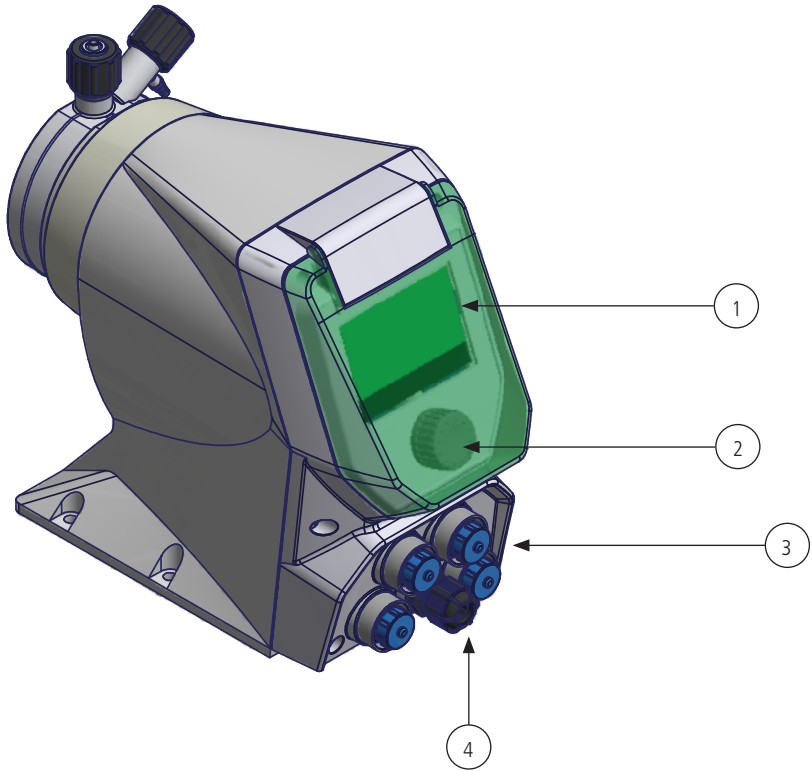

Control elements

| No. | DESCRIPTION |
|-----|--|
| 1 | Multicolor backlight display to indicate pump status: GREEN: pump running WHITE: stand-by YELLOW: warning condition RED: alarm condition |
| 2 | Multifuntion encoder |
| 3 | CONNECTORS: RS485 ALARM INPUT LEVEL |
| 4 | Main cable for power supply |

2.1 Pump head

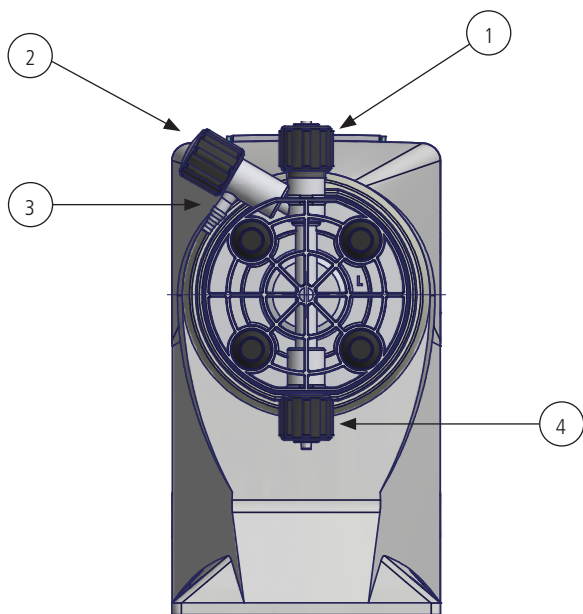

Control elements

| No. | DESCRIPTION |
|-----|---|
| 1 | delivery connection |
| 2 | venting knob (not in Stainless Steel pump head) |
| 3 | venting connection (not in Stainless Steel pump head) |
| 4 | suction connection |

2.3 Dimensions

Fig. 2. Pump dimension - pump head mod. L


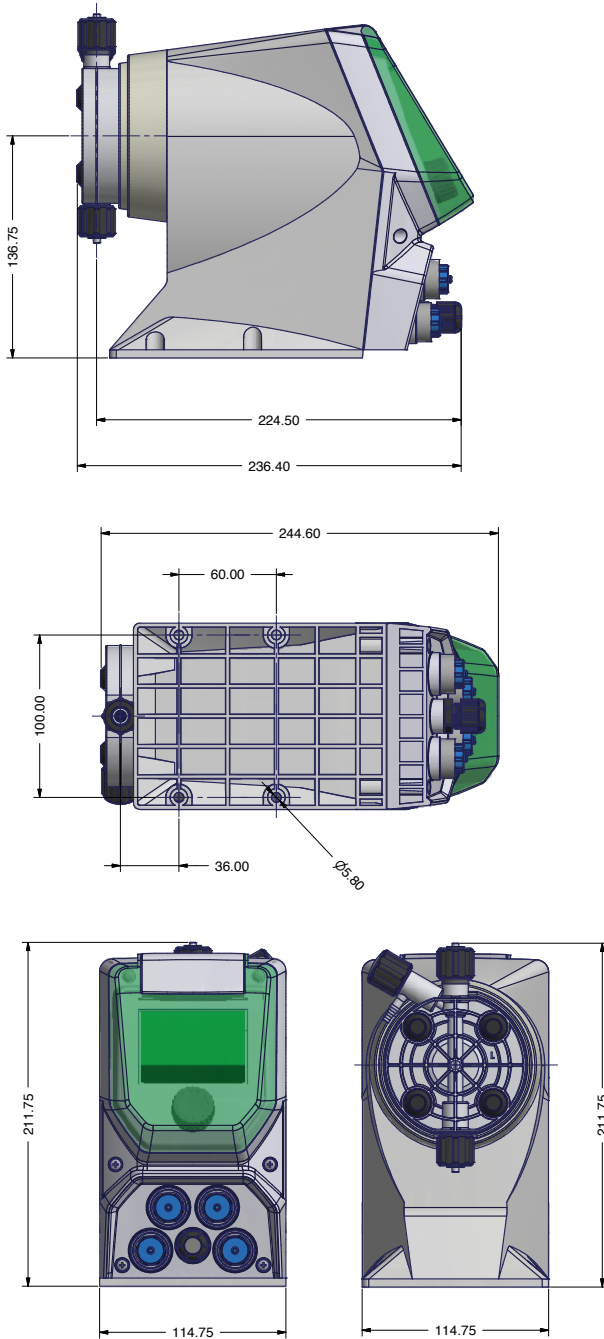


Fig. 3. Pump dimension - pump head mod. N

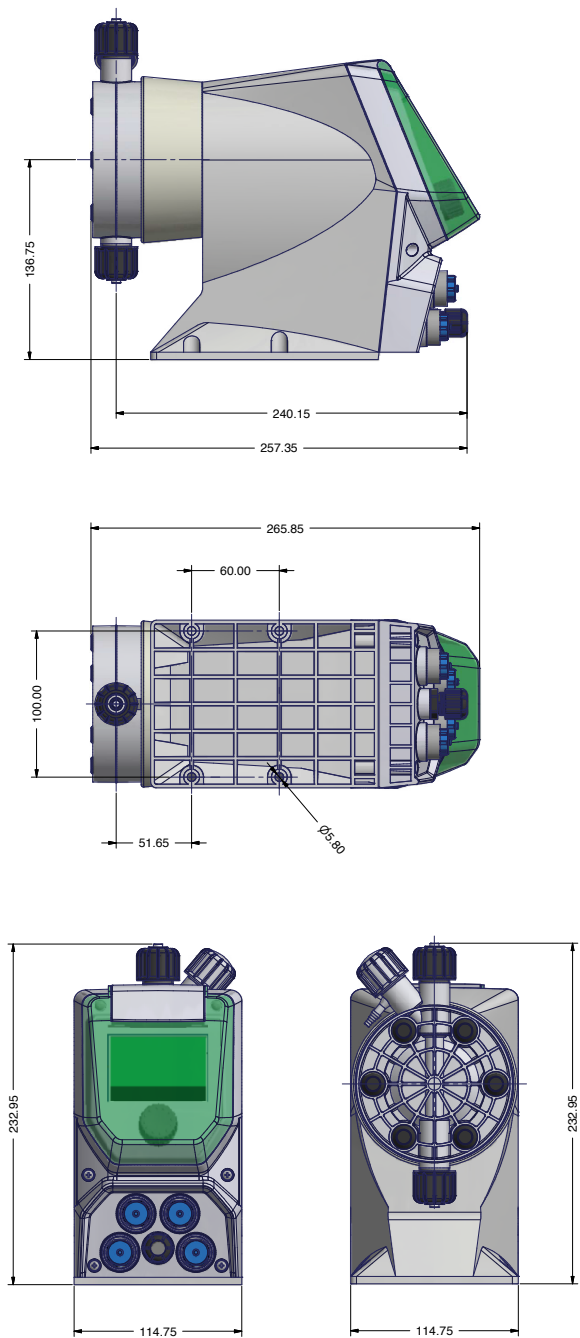

3. INSTALLATION


3.1 How to install metering pump


5 steps to install and start-up the pump:

1. Pump location
2. Piping connections (hoses, level probe, injection valve)
3. Wirings
4. Pump priming
5. Programming and start-up

The operator must be aware of safety precautions to prevent physical injury.


3.2 User health and safety

 **POWER SUPPLY DISCONNECTION**
Disconnect power supply before you perform any installation or maintenance tasks.
Failure to disconnect power will result in serious physical injury.

 **SAFETY EQUIPMENT**
Use safety equipment according to the company regulations. Use this safety equipment within the work area:

- Helmet
- Safety goggles (with side shields)
- Protective shoes
- Protective gloves
- Gas mask

3.3 The work area

 **INSTALLATION AREA**
Observe these regulations and warnings in the work area:


- Always keep the work area clean.
- Pay attention to the risks presented by gas and vapors in the work area.
- Avoid all electrical dangers. Pay attention to the risks of electric shock or arc flash hazards.
- Avoid water splashes and direct sun!

3.4 Pump location


Pump must be installed on a stable support at a max **1,5 mt** height from tank's bottom.

 **Injection point must be higher than tank to avoid accidental chemical injection.**


Otherwise, connect a **multifunction valve** on delivery pipeline.

 **INSTALLATION PUMP GUIDELINES**
Install the pump

- in a safety place and fixed to the table / wall to avoid vibration problems;
- in an easy accessible place;
- in horizontal position.


 Use only hoses compatibles with product to dose.
See "Chemical compatibility table".
If dosing product is not listed please consult full compatibility table or contact chemical's manufacturer.

3.5 Requirements for product positioning

 **REQUIREMENTS FOR PRODUCT POSITIONING**
Only use fasteners of the proper size and material.
Replace all corroded fasteners.
Make sure that all fasteners are properly tightened and that there are no missing fasteners.

3.6 Installation drawing

Fig. 4. Installation drawing

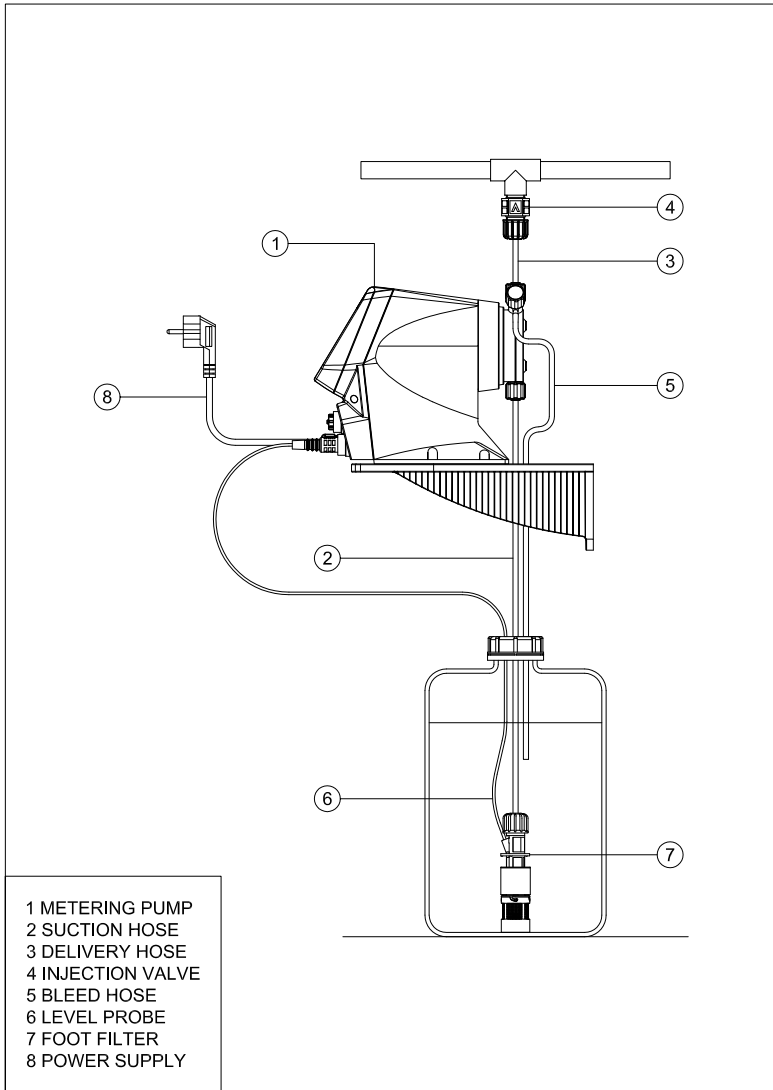

4. PIPING CONNECTIONS


4.1 Foot filter / Level probe

Level probe is assembled with a foot filter that avoid sediments priming problems.
Install level probe on the bottom of the tank.
Connect BNC level probe to the pump BNC input.

Warning: If there is a mixer installed into tank, install a suction lance instead of level probe / foot filter.

In case of replacement of level probe parts, follow the diagram below.

Fig. 5. Level probe assembling diagram.

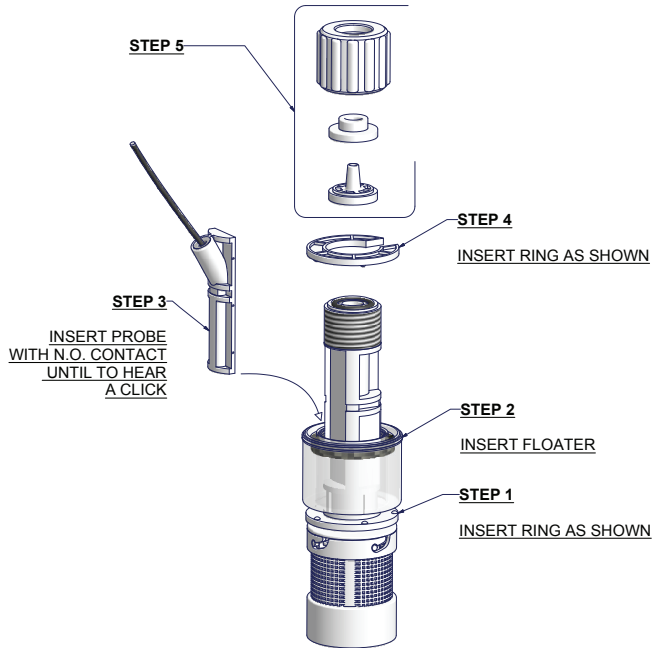

4.2 Suction hose connection

⚠ Suction piping should be as short as possible and installed in vertical position to avoid air bubbles suction.

Completely unscrew tightening nut from pump's head and remove assembling components: tightening nut, holding ring and pipe holder.


Assembly as shown in fig.

Insert hose into pipe holder until it reaches the bottom.

Lock hose on pump's head by screwing down the tightening nut.

⚠ Hand-tighten the nuts firmly.
Do not use tongs or any other tool.

Fig. 6. Suction hose assembling

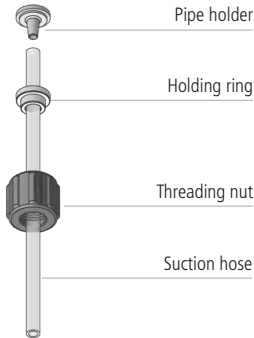

4.3 Pump head / delivery hose assembling procedure

⚠ Suction and delivery valves must be in vertical position.

⚠ Delivery hose must be firmly fixed to avoid suddenly movements that could damage near objects

Completely unscrew tightening nut from pump's head and remove assembling components: tightening nut, holding ring and pipe holder.

Assembly as shown in fig.


Insert hose into pipe holder until it reaches the bottom.

Lock hose on pump's head by screwing down the tightening nut.

⚠ Hand-tighten the nuts firmly.
Do not use tongs or any other tool.

Connect the other end of the hose to the injection valve using the same procedure.

Fig. 7. Delivery hose / pump head assembling

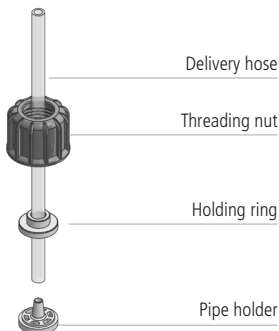

4.4 Injection valve


Injection valve must be installed on plant.
Injection valve will open at pressure greater than 0,3 bar.
On request 1, 2, 3, 4 or 5 bar injection valve are available.

4.5 Venting hose

Insert one side of venting hose into discharge connector as shown in fig 8.

Insert other side of venting hose into product's tank.
During priming procedure product exceeding will flow into tank.

Fig. 8. Manual venting pump head model (NOT STAINLESS STEEL PUMP HEAD).

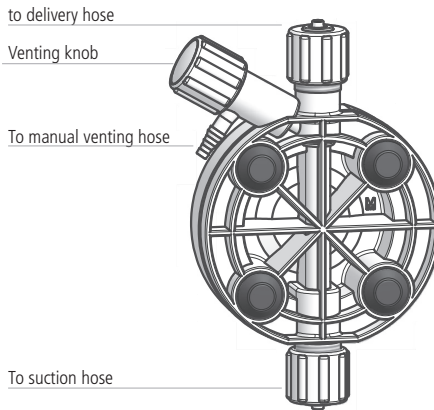

Flow direction is indicated by the arrow on the valves.

For priming procedure see **PRIMING**.

it's allowed to lightly bend venting hose.

! During calibration procedure ("TEST") insert venting hose into a calibration column.

5. ELECTRICAL WIRINGS

5.1 Preliminary checks



THE ELECTRICAL WIRINGS SHOULD BE CARRIED OUT BY AUTHORIZED AND QUALIFIED PERSONNEL ONLY IN ACCORDANCE WITH LOCAL REGULATIONS.

Before to proceed, verify the following steps:

1. Verify the data on rating plate.

Make sure that the electrical data on the rating plate corresponds to the electrical supply.




Damage due to incorrect mains voltage!

The dosing pump can be damaged if you connect it to the wrong mains voltage.

2. Install a relay switch. Do not install it in parallel with heavy inductance load (for example: engines).

3. Verify peak Amps. Pumps do not use motor overload protection.

6. CONNECTIONS

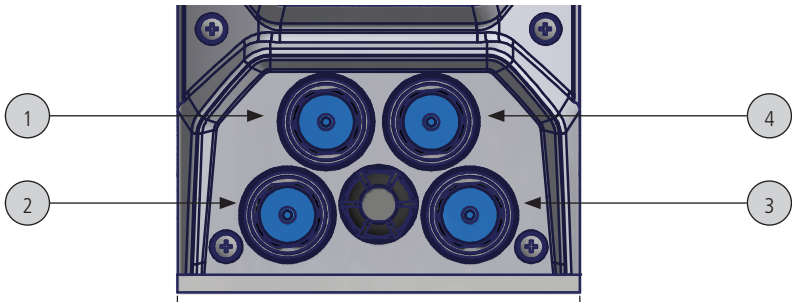

i If not used, protect the mini DIN plugs with the rubber cap.

PLUGS

| No. | M12x1 | Description | Cable Color | Assignments |
|-----|-------|--------------------------|-------------|-------------|
| 1 | | RS485 or MODBUS (option) | 1 Blue | + RS485 |
| | | | 2 Black | - RS485 |
| | | | 3 Brown | GND |

| No. | | Description | Cable Color | Assignments |
|-------|-------|--------------------|--|---------------------------|
| 2 | | STAND-BY | White | + STAND-BY |
| | | | Black | - GND |
| | | INPUT ¹ | Green | + INPUT (MAX 120HZ FREQ.) |
| | | | Black | - GND |
| | | | [Red] - if pulse sender water meter with Hall effect | + 12 V |
| | | EXT CONSTANT | Blue | + EXT CONST |
| Black | - GND | | | |

¹ This input may be used as:

- pulse sender water meter
- pulse sender water meter with Hall effect
- startup contact for "BATCH" mode
- voltage input for "VOLT" mode
- current input for "mA" mode
- pulse input

| No. | | Description | Cable | Assignments |
|-----|--|-------------|--------------------|-------------|
| 3 | | LEVEL | BNC to probe level | / |

| No. | | Description | Cable Color | Assignments |
|-----|--|--------------------|-------------|-------------|
| 4 | | ALARM free contact | White | N.O. |
| | | | Green | N.C. |
| | | | Brown | COMMON |

7. START UP

7.1 Start up

All operation before described must be carried out before starting the pump.

1. Pump location
2. Piping connection
3. Connections (power supply, stand-by/input, level, alarm output)
4. Set up
- 5.

⚠ The pump could take up few seconds before start. It depends on motor ramp up to full speed.

⚠ Control the pressure correspond to the one on the nameplate. If not, stop the pump immediatly.






If the pump does not start to dose:

- a) Stop the pump.
- b) Prime the pump head.
- c) Start the pump again.

6. Monitor periodically the pump functioning.

8. PRIMING

8.1 Precautions

-  Feeder should be interlocked with a no-flow protection device to automatically shut-off the pumps when there is no flow!
-  Adequate measures shall be taken to prevent cross connection of chemicals!
-  Chemical feeding must be stopped during backwash cycles and periods of noflow as these conditions may introduce the potential for chemical overdosing. Not doing so may result in elevated chemical concentrations and hazardous gas introduction into the pool or spa.
-  Never operate any pumping system with a blocked suction and discharge. You must take all necessary measures to avoid this condition.
-  **SAFETY EQUIPMENT**
Use safety equipment according to the company regulations. Use this safety equipment within the work area:
 - Helmet
 - Safety goggles (with side shields)
 - Protective shoes
 - Protective gloves
 - Gas mask

8.2 Priming

To prime the pump:

1. perform all pipings (delivery, suction and venting hose); open discharge knob
2. choose PRIMING icon on main menu. It could take few seconds before pump starts count down
3. When the chemical starts to flow into discharge hose, close discharge knob.
4. Proceed to standard operating condition.

For viscous liquids, to facilitate priming: insert a 20 cc syringe on venting pipe and suck; When syringe is almost full close the discharge valve turning the knob.

9. SET UP

9.1 Basic operations

Main adjustment on encoder

| | |
|-------------------------|---|
| Choose a menu | Rotate encoder on the menu items. |
| Enter into the menu | Press encoder on the menu item, the display will show the options available. |
| Confirm a selection | Press encoder on SAVE icon, settings are saved. |
| Back to previous option | Press encoder on BACK icon to go to previous menu (no save). |
| Enter a value (numeric) | Press encoder on the value, rotate clockwise to increase, counterclockwise to decrease. Press to choose.. |

To save changes press SAVE icon.

Each session has an automatic timeout after 60 seconds, then HOME screen will be displayed.

Choose language at power on. Language can be changed in Advanced / More menu.


9.2 Display icons

| | | | |
|---|------------|---|------------------------|
|  | PRIMING |  | STOP |
|  | STATISTICS |  | RESET |
|  | SETTINGS |  | SAVE |
|  | OFF |  | ALARM ALERT / STAND-BY |
|  | BACK |  | DELIVERY SPEED |
|  | START |  | SLOW MODE |


9.3 Menu overview

HOME

WORKING
MODE

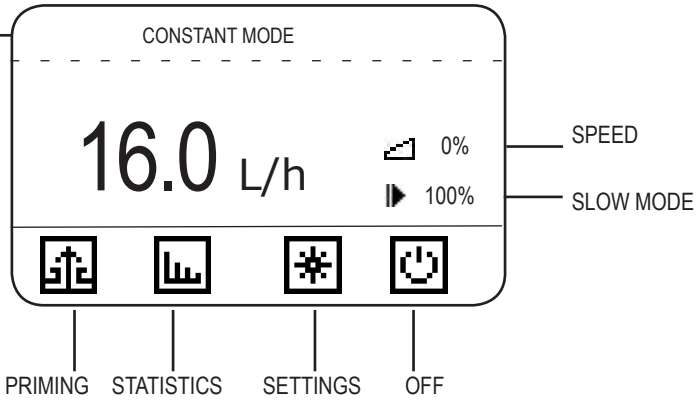

PRIMING

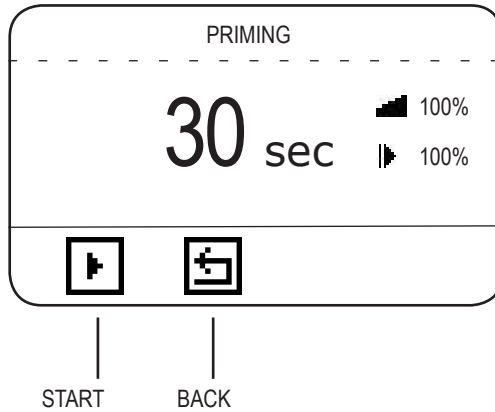

START: to run the PRIMING.



Stop button will stop and reset the counter (default value 30 sec).

The pump could wait up to few seconds before starts PRIMING.



STATISTICS

STATISTICS

> TOTAL
> PARTIAL

> TOTAL

> PARTIAL

TOTAL STATISTICS

DOSED: 10 L
COUNTER: 0 mc

DOSED: total quantity dosed (max 999.999.999 L).
COUNTER: water meter counter (cubic meter of water).

To reset all counters see LOAD DEFAULT menu:
SETTINGS / ADVANCED / MORE / LOAD DEFAULT.

> TOTAL

> PARTIAL

PARTIAL STATISTICS

DOSED: 10 L
COUNTER: 0 mc
FROM: 19/12/17 23:55
DOSED 24h: 10 L
COUNTER 24h: 0 mc


RESET

DOSED: total quantity dosed (max 999.999.999 L).
COUNTER: water meter counter (cubic meter of water).
FROM: date and hour of last statistic reset.
DOSED 24h: quantity dosed yesterday (00:00 to 23.59 of yesterday).
COUNTER 24h: water meter counter (00:00 to 23.59 of yesterday).
To reset counters press RESET icon.



SETTINGS


Setting session have an automatic timeout after 60 seconds, then go back to HOME screen.

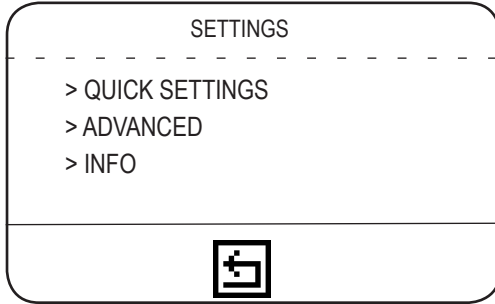

> QUICK SETTINGS

> ADVANCED

> INFO

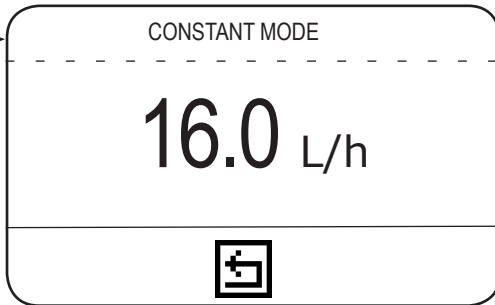


QUICK SETTINGS MENU

Use this menu to modify values of working mode without enter into ADVANCED menu.

> QUICK SETTINGS

> ADVANCED

> INFO

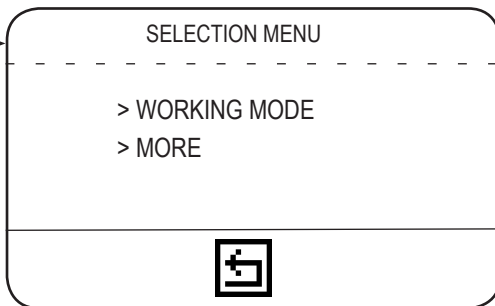

ADVANCED MENU

Use this menu to set working mode and to define all settings.

> QUICK SETTINGS

> ADVANCED



> INFO

WORKING MODE

MORE



WORKING MODE

- > CONSTANT
- > CC PER PULSE
- > PPM
- > PERCENTAGE
- > MLQ
- > BATCH




WORKING MODE


- > VOLT
- > MA
- > PULSE
- > PAUSE-WORK
- > WEEKLY PROGRAMMING



Note: only MLQ - PERCENTAGE - PPM modes affect pulse sender water meter stats.

| MODE | PARAMETERS TO SET* | | NOTE | WHEN |
|---------------|---|---|--|--|
| CONSTANT | L/h: LITERS / HOUR. TURN THE KNOB TO THE REQUIRED LITERS PER HOUR VALUE. THE PUMP WILL INCREASE / DECREASE THE SPEED ACCORDING TO ITS MAXIMUM CAPACITY. | | The pump doses at a constant frequency corresponding to a specific number of engine's rotations that can be visualized by the icon  . | To dose regularly a standard quantity of chemical (no external signal). |
| CC PER PULSE* | CC MIN 0,0001 M/L MAX M/L 2X 1 PULSE = M/L SET | | Dosing rate is determined by pulses from a water meter.. | When using an external signal from a pulse sender water meter. |
| PPM | PPM:1.00 (max 9999.99) CONCENTRATION:10.0% | | Dosing rate is determined by pulses from a water meter, PPM, chemical product (%) concentration. | When using an external signal from a pulse sender water meter and it's necessary to specify only PPM (parts per million) and product concentration, leaving the pump to manage coming pulses. |
| PERCENTAGE | PERCENTAGE:1.00 (max 100.00) CONCENTRATION:10.0% | | Dosing rate is determined by pulses from a water meter, percentage (%), chemical product concentration. | When using an external signal from a pulse sender water meter and it's necessary to specify only %, leaving the pump to manage the coming pulses. |
| MLQ | MLQ:1.00 (max 1000.00) CONCENTRATION:10.0% | | Dosing rate is determined by pulses from a water meter on the base of set MLQ (milliliters per quintal), chemical product concentration (%). | When using an external signal from a pulse sender water meter and it's necessary to dose the product quantity set specifying the MLQ (milliliters per quintal) and leaving the pump to manage the coming pulses. |
| BATCH | EXTERNAL MANUAL | EXTERNAL Quantity: 10.000 L Contact: N.C. (or N.O.) | External mode: signal from an external contact starts the pump to dose the amount product at max frequency. | This mode allows to start dosing after pump receives an external signal. |
| | | MANUAL 10.000 L (Start icon for manual dosing) | Manual mode: to dose a quantity at max frequency (manual start). | This mode allows to start dosing manually. |
| VOLT | HIGH:10.0 V 60.00 L/H LOW: 0.0 V 0.00 L/H | | In Voltage mode, the pump doses proportionally between the low and high voltage values. In VOLT working mode, voltage input value is shown on main menu (top/right). | This mode is used with controllers provided of a proportional output in voltage. |

*Only one mode can be set at a time.

| | | | | |
|---------------------------|---|--|--|---|
| MA | HIGH:20.0 mA 60.00 L/H LOW: 0.0 mA 0.00 L/H | | In mA mode, the pump doses proportionally between the low and high mA values. In mA working mode, mA input value is shown on main menu (top/right). | This mode is used with controllers provided of a proportional output in mA. |
| PULSE | HIGH:180 p/m 60.00 L/H LOW: 0 p/m 0.00 L/H | | The pump doses proportionally between the low and high p/m values. In Pulse working mode, pulses number is shown on main menu (top/right). | This mode is used with controllers provided of an impulsive output |
| PAUSE-WORK | WORKING: 060 min (max 900) PAUSE: 060 min (max 900) QUANTITY: 12.00 L/h  15% | | Pump doses the set quantity during working time. Pause-work cycle repeats regularly. Pause-work cycle starts with the working. In Home it will be displayed the quantity counter (top/right) during working session. If settings are incongruents (i.e.: quantity to dose in 60 min is over pump capacity), values are set automatically on max capacity at max frequency. % of capacity is based on Pump Capacity set. | In this mode the pump doses the set quantity during working time. |
| WEEKLY PROGRAMMING | <input checked="" type="checkbox"/> PROGRAM 1 <input type="checkbox"/> ... <input type="checkbox"/> PROGRAM 24 | Start: hh:mm Duration: 00h 00m Quantity: 2,5l 15% <input checked="" type="checkbox"/> Sunday <input type="checkbox"/> Monday <input type="checkbox"/> ... <input checked="" type="checkbox"/> Saturday | Set programs (up to 24). For each program set start time, duration, quantity to dose and days. Pump will dose the quantity starting at the time set. The duration cannot be over the day. Minimum quantity is calculated basing on pump capacity. Do not overlap programs. | This mode is used for weekly program pump dosing activity. |

> QUICK SETTINGS

> ADVANCED


> INFO

WORKING MODE

MORE


MORE

- > PUMP CAPACITY
- > TEST
- > LEVEL ALARM
- > STAND-BY
- > EXTERNAL INPUT
- > WATER METER




MORE


- > TIMEOUT
- > OVERFLOW
- > UNIT OF MEASURE
- > DATA & CLOCK
- > LANGUAGE




MORE

- > POWER ON DELAY
- > PASSWORD
- > ALARM OUTPUT
- > DISPLAY CONTRAST
- > LOAD DEFAULT
- > MODBUS *(OPTION)*



| | PARAMETERS TO SET | | NOTE |
|------------------------|---|---|--|
| PUMP CAPACITY | FLOW: 999.9 L/h CC/MIN: 16665.00 SLOW MODE: 100% | | Pump capacity default setting is based on pump's label. Slow mode enables reduction of the suction speed. It can be set: 25; 50; 75; 100% |
| TEST | 60 SEC | | Run the test to verify pump capacity (max frequency/speed) |
| LEVEL ALARM | STOP AFTER: 10.0 L CONTACT: N.O. | | Level alarm is a pre-alarm on tank level. To delete the alarm, fill the tank. Level alarm set on "0 L" stops the pump. You can set contact N.O. or N.C. |
| STAND-BY | DISABLED <input type="checkbox"/> STAND-BY <input checked="" type="checkbox"/> | CONTACT: N.O. | External signal connected to stand-by input can be: Enabled (STAND-BY) and set on N.O. or N.C. |
| EXTERNAL INPUT | DISABLED <input type="checkbox"/> EXTERNAL INPUT <input checked="" type="checkbox"/> | CONTACT: N.O. QUANTITY: 12.00 l/h  15% | Enabled as EXTERNAL INPUT. An external signal starts constant dosing of a certain amount per hour (QUANTITY) at the speed shown. In this case, the working mode displayed is EXT CONSTANT. Set contact N.O. or N.C. |
| WATER METER | L/pulse: 1.0 <input checked="" type="checkbox"/> [gal/pulse: 1.0] <input type="checkbox"/> pulse/L: 1.0 <input type="checkbox"/> [pulse/gal: 1.0] <input type="checkbox"/> | | This menu allows to set water meter features. It is possible to enter the amount of pulse/litre or litre/pulse produced by the water meter. This value will determines the dosing rate in PPM / MLQ / PERCENTAGE working modes. |
| TIMEOUT | 0 - 120 SEC | | Maximum time between a pulse and the other within which the pump distributes dosing homogenously. Default value: 10sec. 0 to disable. |
| OVERFLOW | ALARM WORK ALARM STOP | | OVERFLOW generates an alarm (displayed in the main menu) that can stop or not the pump. Overflow can occur in PPM or PERCENTAGE or MLQ or BATCH working mode. In PPM or PERCENTAGE or MLQ overflow alarm occurs when dosing rate exceeds pump capacity. In BATCH working mode overflow alarm occurs when pump receives an external signal during dosing. |
| UNIT OF MEASURE | LITRES | GALLONS | |

| | | | |
|-------------------------|--|---|--|
| DATA & CLOCK | Format: dd/mm/yy 24 Date: Saturday 26/12/15 time: 04:01:19 | Format: mm/dd/yy 12 Date: Saturday 12/26/15 time: 04:01:19 am | Changing Data & Clock, partial statistics will be resetted. |
| POWER ON DELAY | 00 min | | POWER ON DELAY set a delay time at pump's power on. Delay time can be set from 0 to 10 minutes. It is possible to stop delay. |
| PASSWORD | ADMINISTRATOR PASSWORD New password: 0 _ _ _ | > ADMINISTRATOR > USER | Pump default is without password. Insert password: the first time you set administrator password. Once set administrator password, you can choose a user password. Exit from this menu and enter again to set the user password. Reset password with LOAD DEFAULT. |
| LANGUAGE | IT - EN - FR - DE - ES - PT - RU | | Choose language |
| ALARM OUTPUT | ENABLED <input checked="" type="checkbox"/> CONTACT N.C.(or N.O.) <input checked="" type="checkbox"/> LEVEL <input checked="" type="checkbox"/> STAND BY <input checked="" type="checkbox"/> OVERFLOW <input checked="" type="checkbox"/> HIGH TEMPERATURE <input checked="" type="checkbox"/> NO INPUT <input checked="" type="checkbox"/> ENGINE LOCKED <input checked="" type="checkbox"/> | | ALARM OUTPUT manage the alarm output contact status (N.O. or N.C.): - level: product end; - stand-by: pump stop; - overflow: exceeding the operating frequency in PPM or PERCENTAGE or MLQ or receiving an external signal during dosing in BATCH working mode. - high temperature: pump temp too high - no input: input not detected - engine locked: the pump engine is locked |
| DISPLAY CONTRAST |  | | Regulate display contrast to increase display readability. |
| LOAD DEFAULT | YES | NO | Load default of all values to factory default. |

| | | |
|------------------------------|---|---|
| MODBUS (if requested) | ID: 1 BAUDRATE: 9600 FORMAT 8N1 (default) | Set the ID (1 to 255). Set the communication speed: 2400/4800/9600 /19200/38400/115200. Set the format. |
|------------------------------|---|---|

9.4 Pump capacity setting

Pump capacity default setting is based on pump's label.

Values set in PUMP CAPACITY menu (ADVANCED / MORE / PUMP CAPACITY) are affecting pump working mode.

NOTE:

The pump could take up few seconds before starts any operation (PRIMING, run TEST, etc).

> QUICK SETTINGS


> ADVANCED

> INFO

▶ ALARMS

▶ RELEASE

To show active alarms, move on MORE / INFO / ALARMS.

Icon  on main menu indicates one or more alarms active or stand-by.

Tab. 1. Alarms management

| ALARM | PROBLEM | HOW MANAGE |
|-----------|---|--|
| LEVEL | No product | Refill the tank |
| OVER FLOW | Requested capacity by water meter exceeds maximum pump capacity | Check settings Check pump capacity Set pump OFF then ON. |

10. ELECTRICAL WIRING

10.1 Preliminary checks




The electrical wirings should be carried out by **AUTHORIZED AND QUALIFIED PERSONNEL only in accordance with local regulations.**

Before to proceed, verify the following steps:

- 1. Verify the data on nameplate.**
Make sure that the electrical data on the nameplate corresponds to the electrical supply.
- 2. Verify the grounded power outlet.**
The pump must be plugged to a grounded power outlet.
- 3. Verify the cable.**
Cable type and cross-section must be in accordance to pump's data.

11. MAINTENANCE

11.1 Maintenance schedule

 In order to ensure the requirements of potable drinking water treated and the maintenance of the improvements as declared by the manufacturer, this equipment must be checked at least once a month.

OPERATOR PROTECTION


Use safety equipment according to the company regulations.

Use this safety equipment within the work area during installation, service and when handling chemicals:

- protective mask
- protective gloves
- safety goggles
- ear plugs or hear muffs
- further security device, if necessary.



POWER SUPPLY DISCONNECTION

Always disconnect power before you perform any installation or maintenance tasks. Failure to disconnect power will result in serious physical injury.

 Installation and maintenance tasks should be carried out by AUTHORIZED AND QUALIFIED PERSONNEL only in accordance with local regulations.

 Use original spare parts.

11.2 Maintenance inspection

 Shutdown the dosing pump before any maintenance operation  Shutdown procedure.

A maintenance schedule includes these types of inspections:

- Routine maintenance and inspections
- Three-month inspections
- Annual inspections

Shorten the inspection intervals appropriately if the pumped chemical is abrasive or corrosive.

Routine maintenance and inspections

Perform these tasks whenever you perform routine maintenance:

- Inspect the seal. Ensure that there are no leaks from the mechanical seal.
- Check electrical wiring
- Check for unusual noise and vibration.
- Check the pump and piping for leaks.
- Check for corrosion on parts of the pump and / or on hoses.

Three-month inspections

Perform these tasks every three months:

- Check that the tightenings.
- Check the mechanical seal if the pump has been left idle.

Annual inspections


Perform these inspections one time each year:

- Check the pump capacity (as per nameplate).
- Check the pump pressure (as per nameplate).
- Check the pump power (as per nameplate).

If the pump performance does not satisfy your process requirements, and the process requirements have not changed, then perform these steps:

1. Disassemble the pump.
2. Inspect it.
3. Replace worn parts.

11.3 Shutdown procedure

 **This procedure SHOULD BE CARRIED OUT BY AUTHORIZED AND QUALIFIED PERSONNEL**

 **OPERATOR PROTECTION**

Use safety equipment according to the company regulations.

Use this safety equipment within the work area during installation, service and when handling chemicals:

- protective mask
- protective gloves
- safety goggles
- ear plugs or hear muffs
- further security device, if necessary.

Shutdown the dosing pump **before any maintenance operation** or **before long downtimes**. Disconnect power and ensure it cannot be restarted.


 **Depressurize the system. The liquid may leak splashing.**

Drain the chemical from pump head.

Release the pressure and disconnect the discharge pipe from the discharge valve.

Rinse the pump head and clean all valves.

11.4 Display battery replacement procedure

 **POWER SUPPLY DISCONNECTION**
Always disconnect power before you perform this procedure. Failure to disconnect power will result in serious physical injury.

 **This procedure should be carried out by AUTHORIZED AND QUALIFIED PERSONNEL only in accordance with local regulations.**

- Disconnect power supply.
- Unscrew the 4 screws under the pump and remove the base.
- Locate the battery slot behind display.
- With a screwdriver push the battery out of its slot.
- Replace with a new one (CR2032 - 3V) respecting polarity (+/-) as shown on the slot.
- Close the base with the 4 screws.

12. TROUBLESHOOTING

Tab. 2. Guide to troubleshooting.

| PROBLEM | CAUSE | REMEDY |
|--|---|---|
| Dosing pump not delivering or output too low | Suction valve leaking or blocked | Clean or replace suction valve |
| | Suction pipe leaking or blocked | Replace suction pipe |
| | Air bubbles into pump head or into suction pipe | Prime the pump as described in "Priming" |
| | Viscosity too high | Increase the pipe diameter or contact manufacturer |
| | Suction lift too high | Decrease lift |
| | Foot filter obstruction | Clean the foot filter |
| Motor and pump head too hot | Wrong wiring or defecting contact | Check wiring |
| | Pressure too high | Install a valve |
| | Delivery pipe obstructed or blocked | Clean delivery pipe |
| Liquid loss | Diaphragm rupture | Contact manufacturer for diaphragm replacement |
| Display is lighted but no text appear | Display battery low | Replace display battery. Display battery is located on the circuit board under the display. |

If the problem can not be solved, please contact after-sales service or return the dosing pump to the manufacturer.



i Before return the dosing pump to the manufacturer Repair service, drain the chemical from pump head and rinse it.



12.1 Repair service

⚠ If there is the possibility that residual corrosive liquid into pump head could cause damages, declare it on REPAIR FORM.

i Fill in the PRODUCT SERVICE REPAIR FORM and send it with the dosing pump. Repair service is not accepted if PRODUCT SERVICE REPAIR FORM is missing.

Flow rate indicated is for H₂O at 20°C at the rated pressure.
Dosing accuracy ± 1% at rated pressure.

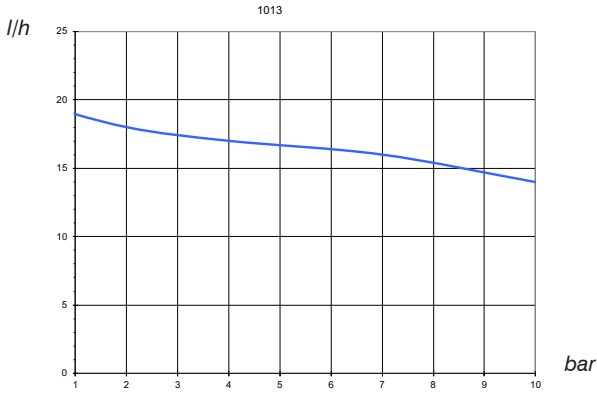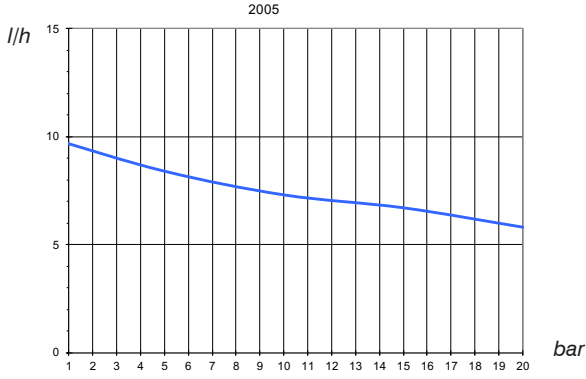

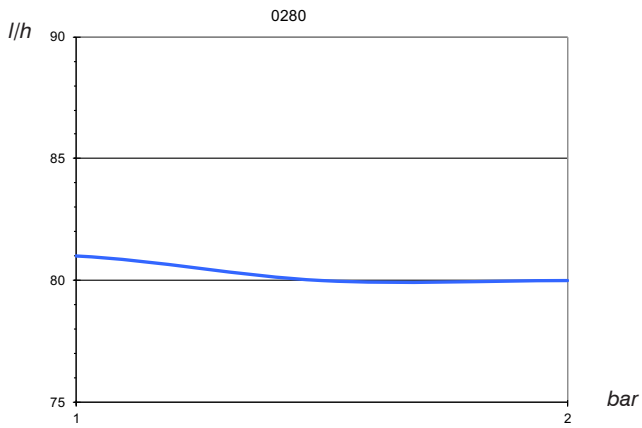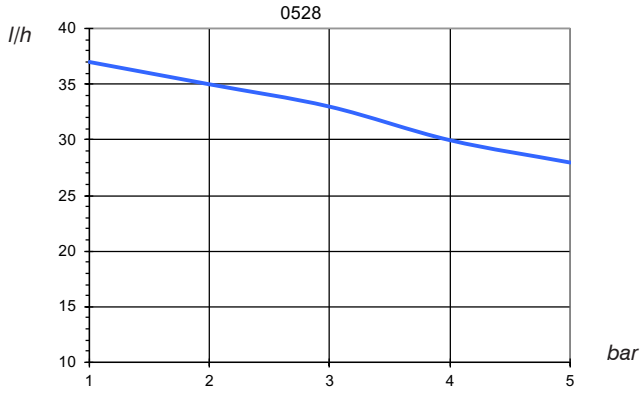

13. COMPATIBILITY TABLE

13.1 Chemical compatibility table

Metering pumps are widely used to dose chemical fluids and it is important that the most suitable material in contact with fluid is selected for each application. This compatibility table serves as a useful help in this respect. All the informations in this list are verified periodically and believed to be correct on the date of issuance. All the informations in this list are based on manufacturer's data and its own experience but since the resistance of any material depends by several factors this list is supplied only as an initial guide, in no way manufacturer makes warranties of any matter respect to the informations provided in this list.

Tab. 3. Chemical compatibility table.

| Product | Formula | Ceram. | PVDF | PP | PVC | SS 316 | PMMA | Hastel. | PTFE | FPM | EPDM | NBR | PE |
|-------------------------------------|---|--------|------|----|-----|--------|------|---------|------|-----|------|-----|----|
| Acetic Acid, Max 75% | CH ₃ COOH | 2 | 1 | 1 | 1 | 1 | 3 | 1 | 1 | 3 | 1 | 3 | 1 |
| Hydrochloric Acid, Concentrate | HCl | 1 | 1 | 1 | 1 | 3 | 1 | 1 | 1 | 1 | 3 | 3 | 1 |
| Hydrofluoric Acid 40% | H ₂ F ₂ | 3 | 1 | 3 | 2 | 3 | 3 | 2 | 1 | 1 | 3 | 3 | 1 |
| Phosphoric Acid, 50% | H ₃ PO ₄ | 1 | 1 | 1 | 1 | 2 | 1 | 1 | 1 | 1 | 1 | 3 | 1 |
| Nitric Acid, 65% | HNO ₃ | 1 | 1 | 2 | 3 | 2 | 3 | 1 | 1 | 1 | 3 | 3 | 2 |
| Sulphuric Acid, 85% | H ₂ SO ₄ | 1 | 1 | 1 | 1 | 2 | 3 | 1 | 1 | 1 | 3 | 3 | 1 |
| Sulphuric Acid, 98.5% | H ₂ SO ₄ | 1 | 1 | 3 | 3 | 3 | 3 | 1 | 1 | 1 | 3 | 3 | 3 |
| Amines | R-NH ₂ | 1 | 2 | 1 | 3 | 1 | - | 1 | 1 | 3 | 3 | 1 | 1 |
| Sodium Bisulphite | NaHSO ₃ | 1 | 1 | 1 | 1 | 2 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| Sodium Carbonate (Soda) | Na ₂ CO ₃ | 2 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 2 | 1 | 1 | 1 |
| Ferric Chloride | FeCl ₃ | 1 | 1 | 1 | 1 | 3 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| Calcium Hydroxide (Slaked Lime) | Ca(OH) ₂ | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| Sodium Hydroxide (Caustic Soda) | NaOH | 2 | 3 | 1 | 1 | 1 | 1 | 1 | 1 | 2 | 1 | 2 | 1 |
| Calcium Hypochlor.(Chlor. ted Lime) | Ca(OCl) ₂ | 1 | 1 | 1 | 1 | 3 | 1 | 1 | 1 | 1 | 1 | 3 | 1 |
| Sodium Hypochlorite, 12.5% | NaOCl + NaCl | 1 | 1 | 2 | 1 | 3 | 1 | 1 | 1 | 1 | 1 | 2 | 3 |
| Potassium Permanganate, 10% | KMnO ₄ | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 3 | 1 |
| Hydrogen Peroxide, 30% (Perydrol) | H ₂ O ₂ | 1 | 1 | 1 | 1 | 1 | 3 | 1 | 1 | 1 | 3 | 3 | 1 |
| Aluminium Sulphate | Al ₂ (SO ₄) ₃ | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |
| Copper-II-Sulphate (Roman Vitriol) | CuSO ₄ | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 | 1 |

1 - Good resistance rating

2 - Fairly resistance rating

3- Not resistant

PRODUCT SERVICE REPAIR FORM

ENCLOSE THE PRESENT FORM TO THE DELIVERY NOTE

DATE

| |
|---|
| <p>SENDER Company name..... Address,..... Phone no. Contact person.....</p> |
|---|

PRODUCT TYPE (see product label)

DEVICE CODE
S/N (serial number).....

OPERATING CONDITIONS

Location/installation description
.....
Chemical,.....
Start-up (date) Running time (approx. hours).....

REMOVE ALL THE LIQUID INTO THE PUMP HEAD AND DRY IT BEFORE PACKAGING IN ITS ORIGINAL BOX.

DESCRIPTION OF PROBLEM

- MECHANICAL
 - Wear parts.....
 - Brekage/other damages
 - Corrosion.....
 - Other.....
- ELECTRICAL
 - Connections, connector, cables
 - Operating controls (keyboard, display, etc.)
 - Elettronics.....
 - Other.....
- LEAKS
 - Connections.....
 - Pump head
- NOT OR INADEQUATE FUNCTION/OTHER
 -
 -
 -

I declare that the dosing pump is free of any hazardous chemical.

Signature of the compiler

Company stamp



DICHIARAZIONE DI CONFORMITA' UE
DECLARATION OF CONFORMITY UE
DECLARACIÓN DE CONFORMIDAD UE



La società:
The Company:
Sociedad:

EMEC S.r.l.

Indirizzo della Società:
Company Address:
Dirección de la empresa:

Via Donatori di Sangue 1

DICHIARA, sotto la propria responsabilità
DECLARES, under its own responsibility, that the product:
DECLARA, bajo su responsabilidad, que el product:

Descrizione del prodotto:
Product description:
Descripción del producto:

Pompe Dosatrici stepper, serie:
stepper metering pumps, series: "PRISMA"
bombas de dosificación paso a paso serie de:

Sono conformi alle seguenti norme:
Conform to the following standards:
Se ajustan a las normas siguientes:

NORME CE/EC RULES (STANDARD EC)/NORMAS DE LA CE

Direttiva Bassa Tensione/Low Voltage Directive/Directiva de baja tensión (2014/35/UE)
Direttiva EMC Compatibilità Elettromagnetica/EMC electromagnetic compatibility directive/EMC directiva de compatibilidad electromagnética (2014/30/UE)
Direttiva Macchine/Directive on machinery/Directiva de máquinas (2006/42/CE)

NORME ARMONIZZATE EUROPEE /EUROPEAN HARMONIZED STANDARDS /LAS NORMAS EUROPEAS ARMONIZADAS

EN 12100-2010, Sicurezza sul macchinario/Safety of Machinery/Seguridad de las máquinas,
EN 809, Pompe e gruppi di pompaggio per liquidi-Requisiti di sicurezza/Pumps and pumping units for liquids-Safety requirements/Bombas y unidades de bombeo para líquidos-los requisitos de seguridad
I nostri strumenti di misura per la temperatura, il pH, il potenziale redox, il cloro attivo libero, il cloro attivo combinato e l'acido isocianurico rientrano nei requisiti della norma UNI 10637/Measuring instruments for temperature, pH, ORP, free and combined chlorine and the isocyanuric acid are within the requirements of standard UNI 10637/Instrumentos de medición de temperatura, pH, potencial redox, cloro activo libre, cloro combinado y el ácido isocianúrico están dentro de los requisitos de la norma UNI 10637.
D.M. 7 Febbraio 2012 n.25 – D.M.6 Aprile 2004 n.174 – Regolamento UE 10/2011 Apparecchiature finalizzate al trattamento dell'acqua destinata al consumo umano/Equipment intended to come into contact with food/Materiales y objetos plasticos destinados a entrar en contacto con alimentos.

I prodotti hanno superato il collaudo finale.
The products have passed the final test.
Los productos han superado la prueba final.

Data:
Date: 06/11/2018
Fecha:

Firma: 
Signature: Cogli Claudio – Presidente EMEC S.r.l.
Firma:

EMEC S.r.l.
via Donatori di Sangue, 1
02100 Rieti - Italia
T +39 0746 22841
F +39 0746 22842

Sede legale
Corso Vittorio Emanuele II, 15
20122 Milano - Italia
info@emec.it - www.emec.it

P.IVA e Cod Fisc. 00620840579 | Registro imprese Milano REA MI-2050351



When dismantling a pump please separate material types and send them according to local recycling disposal requirements. We appreciate your efforts in supporting your local Recycle Environmental Program. Working together we'll form an active union to assure the world's invaluable resources are conserved.

